


3. Pete LaGuardia's Double Slip Switch

To decide which track a train exits or enters on the double slip switch, I decided to use a rotary switch with LED to indicate routing. This method gives you a visual picture as to the routing of the train through the switch by rotating the switch to the route you selected. The LED which indicates the route. DCC manufacturers offer solutions also, but if you are not into purchasing the items needed or programming the modules, this solution is an inexpensive alternate method.

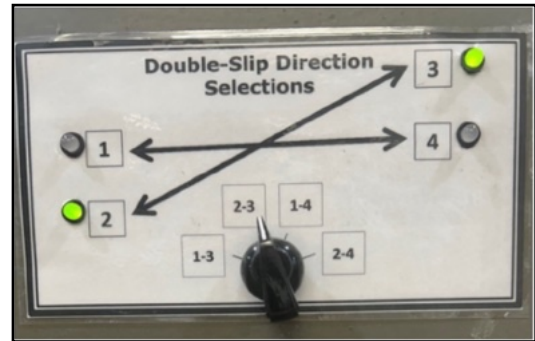

Items required for this method:

- 2 12V DC Power Supply
- 1 4 Pole 4 Position Rotary Switch (4P4T)
- 1 Switch Knob
- 4 LEDs

Pete LaGuardia, MMR

